

Zoznam súradníc

VODOVODNÁ SIEŤ Vetva "A"

Názov bodu	Súradnica	
	Y	X
ZÚ	1 179 993,360	285 363,480
L1	1 179 993,666	285 362,528
L2	1 179 917,511	285 338,027
L3	1 179 911,493	285 311,706
L4	1 179 906,130	285 294,524
L5	1 179 894,142	285 281,097
L6	1 179 883,475	285 272,030
L7	1 179 879,278	285 262,405
L8	1 179 882,252	285 245,160
L9	1 179 895,225	285 237,629
L10	1 179 908,137	285 250,169
L11	1 179 937,460	285 282,975
L12	1 179 959,221	285 298,957
KÚ	1 179 991,988	285 320,108

HAVARIJNÝ PREPAD

Názov bodu	Súradnica	
	Y	X
VO	1 179 936,443	285 350,663
S1	1 179 950,122	285 347,679
S2	1 179 994,863	285 362,073